## 1-3. Adjustable components (seats, mirrors, steering wheel)

## Front seats



Seat position switch

The height of the driver's head restraint is automatically adjusted simultaneously with the seat position adjustment operation.

- Seatback angle switch
- $\blacksquare$  Head restraint height adjustment switch ( $\rightarrow$ P. 95)
- 4 Seat cushion (front) angle switch
- 5 Vertical height adjustment switch
- 6 Lumbar support switch

Driver's seat: 4 way Front passenger's seat: 2 way

7 Seat cushion length adjustment switch


## Operating the front passenger's seat from the driver's seat

► Without rear console display



- 11 Tilts the seatback forward
- Tilts the seatback backward
- Moves the seat forward
- 4 Moves the seat backward


► With rear console display

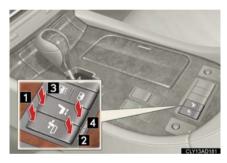

- 1 Tilts the seatback forward
- Tilts the seatback backward
- Moves the seat forward
- 4 Moves the seat backward

## Operating the front passenger's seat from the rear seat (with relaxation seat)

#### ▶ 5-seat models

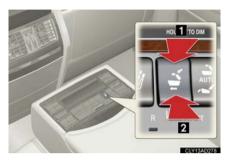

- Moves the front passenger's seat forward
  - The signal beeps when the seat operation stops at the forward limit.
- Moves the front passenger's seat backward

The seatback will return to the neutral position.


## ► 4-seat models



- Moves the front passenger's seat forward
  - The signal beeps when the seat operation stops at the forward limit.
- 2 Moves the front passenger's seat backward

The seatback will return to the neutral position.

#### Active head restraints

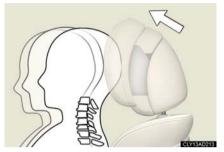

If the vehicle detects an impact during a rear-end collision, the front part of the head restraint moves forward and upward to help reduce the risk of whiplash to the seat occupant.

When reversing, even a small amount of force applied from the rear, such as a minor rear impact, may cause the head restraints to move.

#### Operating the front passenger's seat from the rear seat (with relaxation seat)

The front passenger's seat can be operated when the "ENGINE START STOP" switch is in IGNITION ON mode. However, in the following situations, the front passenger's seat does not move even when the switch is operated:

- The weight of an occupant or heavy object, etc. is detected on the front passenger's seat.
- The front passenger's seat belt is fastened.
- The front passenger's door is open. (The front seat will not move forward.)

## ■ Seat cushion automatic length adjustment (driver's seat)

If the front of the cushion gets too close to the area around the instrument panel when the seat position is being adjusted, the seat cushion will automatically retract.

## ■ Seat operation automatic stop function (with relaxation seat)

If a front seat is likely to come into contact with the retractable table (4-seat models) or the ottoman during seat operation or activation of the auto away function, a buzzer will sound and seat slide operation will be stopped partway.

(A warning message will be shown on the multi-information display.)

#### Active head restraints

- The active head restraint on the front passenger seat will not activate if the seat is unoccupied. However, it may activate during a rear-end collision if luggage is in the seat or the seat belt is fastened.
- Once the active head restraint has activated, the head restraint remains protruded forward and upward. After it has operated, have it repaired at your l exus dealer

## **CAUTION**

#### Seat adjustment

To reduce the risk of sliding under the lap belt during a collision, do not recline the seat more than necessary.

If the seat is too reclined, the lap belt may slide past the hips and apply restraint forces directly to the abdomen, or your neck may contact the shoulder belt, increasing the risk of death or serious injury in the event of an accident.

Adjustments should not be made while driving as the seat may unexpectedly move and cause the driver to lose control of the vehicle.

## Operating the front passenger's seat from the driver's seat or rear seat

Do not operate the front passenger's seat when a passenger is seated in it. In addition, do not let anyone sit down in the front passenger's seat while the seat is being operated. The front passenger may catch their legs between the instrument panel and seat, resulting in injury.

## ■ The active head restraint on the front passenger seat

Do not place anything, such as a cushion, on the front passenger's seat.

Doing so will disperse the passenger's weight, which may prevents the sensor from detecting the passenger's weight properly. As a result, the active head restraint may not activate in the event of an accident.

## Active head restraint precautions

- Do not put head restraint covers.
- For removal, installation, modification, disassembly or disposal of the active head restraints, contact your Lexus dealer.
  - Inappropriate handling of the active head restraints may prevent them from operating properly during an accident.

## **⚠** NOTICE


Operating the front passenger's seat from the driver's seat or rear seat

Before operating the front passenger's seat, make sure that there is no luggage or any other objects on the seat or in the footwell that could prevent its operation. Failure to do so may result in excess force being applied, causing damage to the seat and/or the luggage.

## 1-3. Adjustable components (seats, mirrors, steering wheel)

## Power rear seat\*


► 5-seat models without relaxation seat

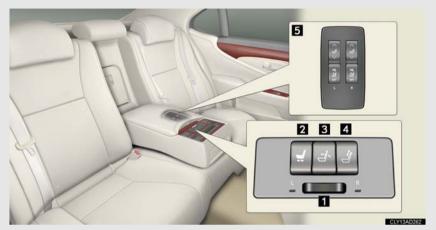

- Seat selection switch The indicator light for the seat that can be operated comes on.
- Seat position adjustment switch
- **3** Seatback upper angle adjustment switch
- $\blacksquare$  Head restraint height adjustment switch ( $\rightarrow$ P. 95)
- Pelvic support seat controller  $(\rightarrow P. 81)$

The seat return function linked to the door opening operation allows the seat to automatically return to the neutral position for easier access to and from the vehicle.

## ► 5-seat models with relaxation seat

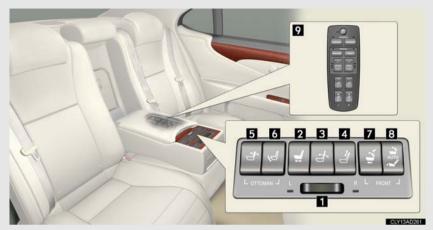


The rear seat behind the front passenger's seat is a relaxation seat, which is equipped with a seatback angle adjustment function and an ottoman.

- Seat selection switch
  The indicator light for the seat that can be operated comes on.
- Seat position adjustment switch
- 3 Seatback upper angle adjustment switch
- $\blacksquare$  Head restraint height adjustment switch ( $\rightarrow$ P. 95)
- **5** Seatback angle adjustment switch
- 6 Ottoman angle adjustment switch
- 7 Front passenger's seat control switch  $(\rightarrow P. 72)$
- 8 Relaxation mode switch

The seat return function linked to the door opening operation allows the seat to automatically return to the neutral position for easier access to and from the vehicle.

## ► 4-seat models

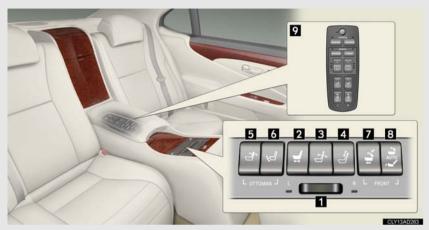

The rear seat behind the front passenger's seat is a relaxation seat, which is equipped with a seatback angle adjustment function and an ottoman.

- Seat selection switch The indicator light for the seat that can be operated comes on.
- Seat position adjustment switch
- 3 Seatback upper angle adjustment switch
- $\blacksquare$  Head restraint height adjustment switch ( $\rightarrow$ P. 95)
- 5 Seatback angle adjustment switch
- 6 Ottoman angle adjustment switch
- **7** Front passenger's seat control switch  $(\rightarrow P. 72)$
- Relaxation mode switch

The seat return function linked to the door opening operation allows the seat to automatically return to the neutral position for easier access to and from the vehicle.

## Returning the rear seat from the front seats



The seat will return to the neutral position while the button is pressed and held.

## Relaxation mode operation (with relaxation seat)

Relaxation mode can be entered by operating a switch. The front passenger seat will move forward, and then the seatback of the relaxation seat will recline and the ottoman will simultaneously rise.

#### ► 5-seat models




Pressing the switch will cause a beep to sound and operation will start.

- Enters relaxation mode
- 2 Returns to the neutral position.

To stop the operation part-way through, press either side of the switch again, or press any other seat adjustment button.

#### ► 4-seat models

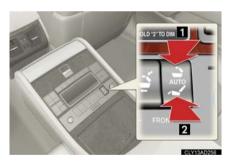

Pressing the switch will cause a beep to sound and operation will start.

- Enters relaxation mode
- 2 Returns to the neutral position.

To stop the operation part-way through, press either side of the switch again, or press any other seat adjustment button.

## Pelvic support seat with seat vibrator

Pelvic support seat with seat vibrator, which feature a support plate mounted in the seatback and a vibration function, are equipped on each outside rear seat. The support plate position and vibration speed can be adjusted according to the occupant's preferences.


▶ Without relaxation seat



- Support plate position adjustment switch
- Vibration switch

Press to operate the vibration function. Vibration will start in the same speed level as when previously operated. Each time is pressed, the speed changes between 3 levels. Pressing "OFF" stops the vibration function.

► With relaxation seat

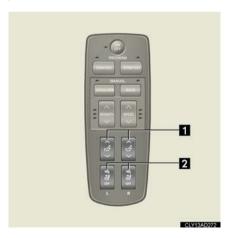


- Support plate position adjustment switch
- Vibration switch

Press to operate the vibration function. Vibration will start in the same speed level as when previously operated. Each time is pressed, the speed changes between 3 levels. Pressing "OFF" stops the vibration function.

## Rear seat relaxation system (with relaxation seat)

Pneumatic chambers built into the rear seat behind the front passenger's seat provide the occupant with pressure of different speeds and intensities.

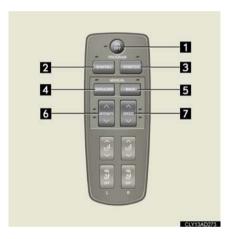

- In Turns the system on and off


  If no buttons are selected within approximately 3 minutes of operating this switch, the system will automatically turn off.
- 2 Starts the "SHIATSU" program

  Partial pressure for the whole back
- Starts the "STRETCH" program

  Stretches and relaxes the lower back
- 4 Starts operation for the upper back
- 5 Starts operation for the lower back
- 6 Adjusts the intensity of the air pressure
  - 3 intensity levels are available.
- Adjusts the speed of the air unit 3 speed levels are available.

#### ■ Seat return function linked to the door opening operation

- Operating conditions
   The "ENGINE START STOP" switch is in IGNITION ON mode.
- Canceling operation partway through
   During the seat return operation, performing either of the following actions cancels the operation:
  - Pressing the "SET", "M" or "C" button
  - · Pressing any of the seat adjustment switches
- Disabling the seat return function

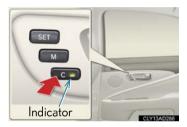

Pressing the "C" button will disable the seat return function.

The indicator light comes on when the seat return function is disabled.

Pressing the button again will enable the seat return function.

Seat return operation after turning the "ENGINE START STOP" switch OFF The seat will automatically return to the neutral position if the door is opened within approximately 45 seconds of the "ENGINE START STOP" switch being turned OFF.

## ■ Relaxation mode (relaxation seat)

- Operating conditions Relaxation mode can be entered when the "ENGINE START STOP" switch is in IGNITION ON mode. However, in the following situations, relaxation mode cannot be entered even when the switch is operated:
  - The weight of an occupant or heavy object etc. is detected on the front passenger's seat.
  - The front passenger's seat belt is fastened.
  - The front passenger's door is open. (The front seat will not move forward.)
- Operation after turning the "ENGINE START STOP" switch OFF The rear seat can be returned to the neutral position as long as the relaxation mode switch is operated within approximately 45 seconds of the "ENGINE START STOP" switch being turned OFF.

#### ■ Pelvic support seat with seat vibrator

- Operating conditions
   The "ENGINE START STOP" switch is in IGNITION ON mode.
- Automatic stop function
  - Vibration will automatically stop approximately 15 minutes after starting.
  - Vibration will automatically stop if the adjacent rear door is opened.
- Pelvic support seat return function
  - The position of the support plate will automatically return to the neutral position within approximately 5 seconds of the "ENGINE START STOP" switch being turned OFF.
  - The position of the support plate will automatically return to the neutral position if the adjacent rear door is opened.

#### ■ Rear seat relaxation system (with relaxation seat)

- Operating conditions
   The "ENGINE START STOP" switch is in IGNITION ON mode.
- Automatic stop function
   Each operation will automatically stop approximately 15 minutes after starting.

#### ■ Power rear seats

Seat adjustment

To reduce the risk of sliding under the lap belt during a collision, do not recline the seat more than necessary.

If the seat is too reclined, the lap belt may slide past the hips and apply restraint forces directly to the abdomen, or your neck may come into contact with the shoulder belt, increasing the risk of death or serious injury in the event of an accident.

Adjustments should not be made while driving as the seat may unexpectedly move and cause the driver to lose control of the vehicle.

- When returning the rear seats from the front seats
   To avoid injuring the rear passengers, wait until they have gotten out of the vehicle before returning the rear seats to the neutral position.
- When adjusting the seat position and ottoman angle (with relaxation seat)
   Keep sufficient footwell space to prevent your feet from being caught by the front seat.
- Using the ottoman (with relaxation seat)
  - Do not sit on the ottoman.
    - If someone sits on the ottoman, the seat belt cannot be fitted properly, and they may be thrown from the seat in the event of an accident or sudden braking, resulting in death or serious injury.
  - When getting in or out of the vehicle, retract the ottoman. If the ottoman is not retracted, it may cause a fall, resulting in an injury.

## ■ Using the pelvic support seat with seat vibrator and rear seat relaxation system

- Those who are pregnant, have recently given birth, or suffer from ailments requiring rest (heart disease etc.) should consult a doctor before use.
- Do not allow children to use the pelvic support seat vibration function or the rear seat relaxation function.
- Do not use immediately after consuming a meal or alcohol, or for an extended period of time.
- If you feel sick while using the pelvic support seat vibration function or the rear seat relaxation function, immediately discontinue use.

## **⚠** NOTICE

#### ■ To prevent an ottoman malfunction (with relaxation seat)

- Do not place any objects in the rear seat footwell that could prevent the operation of the ottoman.
- Do not place heavy luggage on the ottoman.
- Do not place any objects under the ottoman while it is raised for use. These objects may interfere with the ottoman being folded, causing damage to the ottoman or the objects themselves.

# Your preferred driving position (the position of the driver's seat and steering wheel, angle of the outside rear view mirrors, and height of seat belt


ing wheel, angle of the outside rear view mirrors, and height of seat belt shoulder anchor) can be memorized and recalled with the touch of a button. It is also possible to set this function to activate automatically when the doors are unlocked.

Three different driving positions can be entered into memory.

The same buttons are found on the front passenger's side, allowing the front passenger's seat position and seat belt shoulder anchor height to be memorized.

## ■ Entering a position to memory

- STEP 1 Check that the shift lever is in "P".
- Turn the "ENGINE START STOP" switch to IGNITION ON mode.
- STEP 3 Adjust the driver's seat, steering wheel, outside rear view mirrors and seat belt shoulder anchor height to the desired positions (When memorizing the front passenger's seat, adjust the front passenger's seat to the desired positions.)

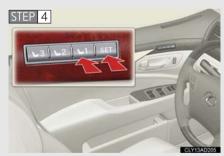

Press the "SET" button, then within 3 seconds press button "1", "2" or "3" until the signal beeps.

If the selected button has already been preset, the previously recorded position will be overwritten.

## Recalling the memorized position

- STEP 1 Check that the shift lever is in "P".
- STEP 2 Turn the "ENGINE START STOP" switch to IGNITION ON mode.



Press button "1", "2" or "3" to recall the memorized position.

Front passenger's seat (with relaxation seat): When retractable table (4-seat models) or ottoman is used, rearward memories cannot be recalled.

## Linking driving position memory with door unlock operation (driver's seat)

One memorized driving position can be registered to each electronic key. This driving position will then be recalled when the driver's door is unlocked using the electronic key's entry function or wireless remote control and the driver's door is opened.

- ▶ Using the wireless remote control
- Turn the "ENGINE START STOP" switch OFF and close the driver's door.



While pressing the desired button ("1", "2" or "3"), push ? on the wireless remote control until the signal beeps.

To prevent unintended triggering of the alarm, open and close a door once after a driving position has been recorded. (If a door is not opened within 60 seconds after is pressed, the doors will be locked again and the alarm will automatically be set.)

In case that the alarm is triggered, immediately stop the alarm.  $(\rightarrow P. 122)$ 

## ► Using the door lock switch


Carry only one of the keys (including the card key) to which you want to link the driving position. If 2 or more keys are in the vehicle, the driving position cannot be linked properly.

STEP 1 Turn the "ENGINE START STOP" switch OFF and close the driver's door.



While pressing the desired button ("1", "2" or "3"), press the lock or unlock side on the door lock switch (either the driver or passenger side) until the signal beeps.

## Power easy access system (driver's seat)

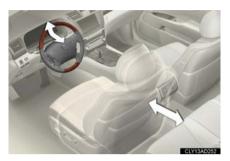

The auto away/return function enables easy access by activating when the driver attempts to enter or exit the vehicle.

► Auto away function (exiting the vehicle)

When all of the following actions have been performed, the steering wheel will move up and back to the point farthest away from the driver and the seat will move backward:

- The shift lever has been shifted to "P".
- The "ENGINE START STOP" switch has been turned OFF.
- The driver seat belt has been unfastened.
- ► Auto return function (entering the vehicle)

When either of the following actions has been performed, the steering wheel will move toward the driver and seat will move forward:

- The "ENGINE START STOP" switch has been turned to ACCES-SORY or IGNITION ON mode
- The driver seat belt has been fastened.

#### ■ When driving position memory is linked with door unlock operation

If the driver's door is opened, the driver's seat will move toward the memorized position but stop slightly beforehand to allow easy access to the vehicle. Turning the "ENGINE START STOP" switch to ACCESSORY or IGNITION ON mode, or fastening the driver's seat belt moves the seat fully into the memorized position.

#### ■ Canceling the linked door unlock operation

STEP 1 Turn the "ENGINE START STOP" switch OFF and close the driver's door.

STEP 2 Using the wireless remote control: While pushing the "SET" button, press

on the wireless remote control until the signal beeps.
Using the door lock switch: While pressing the "SET" button, press the lock or unlock side on the door lock switch until the signal beeps.

#### Operating the driving position memory after turning the "ENGINE START STOP" switch OFF

In the following situations, the memorized positions (1 - 3) can be activated even after the "ENGINE START STOP" switch has been turned off.

Driver's seat (except steering wheel): Within 180 seconds after the driver's door is opened and within 60 seconds after the driver's door is closed.

Front passenger's seat: Within 180 seconds after the front passenger's door is opened.

## ■ Stopping memorized position recall operations part-way through

Press the "SET", "1", "2" or "3" button to stop all memorized recall operations part way through.

To individually stop a memorized position recall operation for a seat, the steering wheel, outside rear view mirrors, or a seat belt shoulder anchor, operate the corresponding position adjustment switch while the memorized position is being recalled. All items can still be adjusted manually even if their recall operation is stopped part-way through.

#### ■ Seat operation automatic stop function (with relaxation seat)

If a front seat is likely to come into contact with the retractable table (4-seat models) or the ottoman during seat operation or activation of the auto away function, a buzzer will sound and seat slide operation will be stopped partway. (A warning message will be shown on the multi-information display.)

#### ■ Power easy access system operations

- If the seat is already close to the rearmost position, the auto away function may not operate when the driver exits the vehicle.
- If the seat position is adjusted during the auto away function's operation, the operation will stop.
- If the seat position is adjusted during or after the auto away function's operation, the auto return function will not operate when entering the vehicle.

#### ■ Customization

The distance that the driver's seat moves backward during the auto away function can be changed. (Customizable features  $\rightarrow$  P. 794)

## **A** CAUTION

## ■ Seat adjustment caution

Take care during seat adjustment so that the seat does not strike the rear passenger or squeeze your body against the steering wheel. Always check that there is no rear passenger or luggage behind your seat during the auto away function is activated when you stop and exit from the vehicle.

## 1-3. Adjustable components (seats, mirrors, steering wheel)

## Rear seat position memory\*

The rear seat position can be memorized and recalled with the touch of a button.

## Entering a position to memory

Turn the "ENGINE START STOP" switch to IGNITION ON mode.

STEP 2 Adjust the rear seat to the desired position.



Press the "SET" button until the signal beeps.

If the preset is being used, the previously recorded seat position will be overwritten.

## ■ Recalling the memorized position




Press the "M" button until the signal beeps.

Relaxation seat: If the ottoman is in a higher position than the memorized position, it will move downward. However, if the ottoman is in a lower position than the memorized position, it will not move upward.

## ■ Seat return function linked to the door opening operation

When the door is opened, the rear seat will automatically return to the neutral position. This function is available for approximately 45 seconds after the "ENGINE START STOP" switch is turned OFF.

#### ■ Canceling the seat position recall or return function

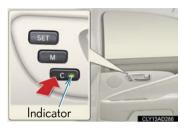

Pressing the "C" button will disable the seat position recall or seat return function.

The indicator light comes on when the function is disabled.

Pressing the button again will enable the seat position recall or seat return function.

Performing either of the following cancels the seat returning operation:

- Press the "SET", "M" or "C" button.
- Press any of the seat adjustment switches.


## **A** CAUTION

## ■ Seat adjustment caution

Take care during seat adjustment so that the rear passengers do not strike the front seats.

## Head restraints are provided for all seats.

#### Front seats

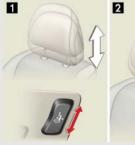



- Vertical adjustment
  - $\rightarrow$ P. 70
- Horizontal adjustment

## Outside rear seats

▶ Power type






- Vertical adjustment
  - $\rightarrow$ P. 76
- Side support adjustment







- Vertical adjustment
  - Pull the head restraints up when raising.
  - Push and hold the lock release button when lowering.
- 2 Horizontal adjustment

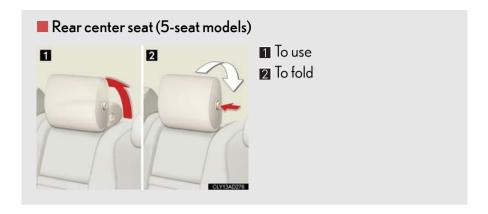

#### ■ Removing the head restraints

For removal and installation of the head restraint, contact your Lexus dealer.

■ Adjusting the height of the head restraints (except rear center seat)



Make sure that the head restraints are adjusted so that the center of the head restraint is closest to the top of your ears.

#### Rear center seat

Make sure to pull the head restraint forward when using the rear center seat.

#### Head restraint precautions

Observe the following precautions regarding the head restraints. Failure to do so may result in death or serious injury.

- Use the head restraints designed for each respective seat.
- Adjust the head restraints to the correct position at all times.
- Manual type: After adjusting the head restraints, push down on them and make sure they are locked in position.
- Do not drive with the head restraints removed.

## 1-3. Adjustable components (seats, mirrors, steering wheel)

## Seat belts


Make sure that all occupants are wearing their seat belts before driving the vehicle

## Correct use of the seat belts



- Extend the shoulder belt so that it comes fully over the shoulder, but does not come into contact with the neck or slide off the shoulder.
- Position the lap belt as low as possible over the hips.
- Adjust the position of the seatback. Sit up straight and well back in the seat.
- Do not twist the seat belt.

## Fastening and releasing the seat belt

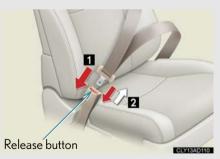


- Fastening the belt

  Push the tab into the buckle until a clicking sound is heard.
- Releasing the belt

Press the release button. If the seat belt cannot be pulled out of the retractor, firmly pull the belt and release it.

## Adjusting the seat belt shoulder anchor height (front seats)

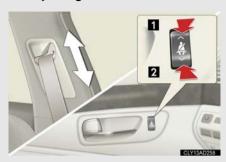


- 1 Up
- 2 Down

## Seat belt comfort guide (outside rear seats)



If the shoulder belt sits close to a person's neck, slide the seat belt comfort guide forward.

## Seat belt pretensioners (front and outside rear seats)

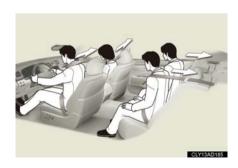

The pretensioner helps the seat belt to quickly restrain the occupant by retracting the seat belt when the vehicle is subjected to certain types of severe frontal collision.

The pretensioner may not activate in the event of a minor frontal impact, a side impact or a rear impact.

## Pre-collision seat belts (front seats of vehicles with pre-collision system)

If the system determines that a collision is unavoidable, the front seatbelts will retract before the collision.  $(\rightarrow P. 312)$ 


#### ■ Emergency locking retractor (ELR)

The retractor will lock the belt during a sudden stop or on impact. It may also lock if you lean forward too quickly. A slow, easy motion will allow the belt to extend so that you can move around fully.

## ■ Automatic locking retractor (ALR)

When a passenger's shoulder belt is completely extended and then retracted even slightly, the belt is locked in that position and cannot be extended. This feature is used to hold the child restraint system (CRS) firmly. To free the belt again, fully retract the belt and then pull the belt out once more.  $(\rightarrow P.156)$ 

#### ■ Pregnant women

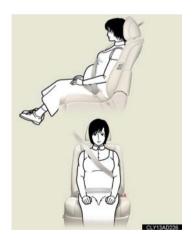

Obtain medical advice and wear the seat belt in the proper way.  $(\rightarrow P. 98)$ 

Women who are pregnant should position the lap belt as low as possible over the hips in the same manner as other occupants. Extend the shoulder belt completely over the shoulder and position the belt across the chest. Avoid belt contact over the round part of the abdominal area.

If the seat belt is not worn properly, not only the pregnant woman, but also the fetus could suffer death or serious injury as a result of sudden braking or a collision.

## ■ People suffering illness

Obtain medical advice and wear the seat belt in the proper way.

#### ■ Child seat belt usage

The seat belts of your vehicle were principally designed for persons of adult size.

- Use a child restraint system appropriate for the child, until the child becomes large enough to properly wear the vehicle's seat belt. ( $\rightarrow$ P. 145)
- When the child becomes large enough to properly wear the vehicle's seat belt, follow the instructions on P. 98 regarding seat belt usage.

#### ■ Automatic adjustment of the seat belt shoulder anchor height (front seats)

A desired seat belt shoulder anchor height can be entered to memory and recalled automatically by the driving position memory and seat position memory.  $(\rightarrow P. 87)$ 

## Replacing the belt after the pretensioner has been activated

If the vehicle is involved in multiple collisions, the pretensioner will activate for the first collision, but will not activate for the second or subsequent collisions.

#### ■ Seat belt extender



If your seat belts cannot be fastened securely because they are not long enough, a personalized seat belt extender is available from your Lexus dealer free of charge.

Observe the following precautions to reduce the risk of injury in the event of sudden braking, sudden swerving or an accident.

Failure to do so may cause death or serious injury.

#### ■ Wearing a seat belt

- Ensure that all passengers wear a seat belt.
- Always wear a seat belt properly.
- Each seat belt should be used by one person only. Do not use a seat belt for more than one person at once, including children.
- Lexus recommends that children be seated in the rear seat and always use a seat belt and/or an appropriate child restraint system.
- To achieve a proper seating position, do not recline the seat more than necessary. The seat belt is most effective when the occupants are sitting up straight and well back in the seats.
- Do not wear the shoulder belt under your arm.
- Always wear your seat belt low and snug across your hips.

#### ■ When children are in the vehicle

Do not allow children to play with the seat belt. If the seat belt becomes twisted around a child's neck, it may lead to choking or other serious injuries that could result in death.

If this occurs and the buckle cannot be unfastened, scissors should be used to cut the belt.

## Adjustable shoulder anchor

Always make sure the shoulder belt is positioned across the center of your shoulder. The belt should be kept away from your neck, but not falling off your shoulder. Failure to do so could reduce the amount of protection in an accident and cause death or serious injuries in the event of a sudden stop, sudden swerve or accident.  $(\rightarrow P.99)$ 

#### Seat belt pretensioners

- Do not place anything, such as a cushion, on the front passenger's seat. Doing so will disperse the passenger's weight, which prevents the sensor from detecting the passenger's weight properly. As a result, the seat belt pretensioner for the front passenger's seat may not activate in the event of a collision.
- If the pretensioner has activated, the SRS warning light will come on. In that case, the seat belt cannot be used again and must be replaced at your Lexus dealer.

#### ■ Seat belt damage and wear

- Do not damage the seat belts by allowing the belt, plate, or buckle to be jammed in the door.
- Inspect the seat belt system periodically. Check for cuts, fraying, and loose parts.
   Do not use a damaged seat belt until it is replaced. Damaged seat belts cannot protect an occupant from death or serious injury.
- Ensure that the belt and tab are locked and the belt is not twisted.
   If the seat belt does not function correctly, immediately contact your Lexus dealer.
- Replace the seat assembly, including the belts, if your vehicle has been involved in a serious accident, even if there is no obvious damage.
- Do not attempt to install, remove, modify, disassemble or dispose of the seat belts.
   Have any necessary repairs carried out by your Lexus dealer. Inappropriate handling of the pretensioner may prevent it from operating properly resulting in death or serious injury.

## ■ Precaution for pre-collision seat belts

Do not rely on the pre-collision system to avoid accidents. Always pay attention to the surrounding conditions, and drive safely and responsibly.

#### Using a seat belt extender

- Do not wear the seat belt extender if you can fasten the seat belt without the extender.
- Do not use the seat belt extender when installing a child restraint system because the belt will not securely hold the child restraint system, increasing the risk of death or serious injury in the event of an accident.
- The personalized extender may not be safe on another vehicle, when used by another person, or at a different seating position other than the one originally intended.



## ♠ NOTICE


#### ■ When using a seat belt extender

When releasing the seat belt, press on the buckle release button on the extender, not on the seat belt.

This helps prevent damage to the vehicle interior and the extender itself.

## 1-3. Adjustable components (seats, mirrors, steering wheel) Steering wheel

The steering wheel can be adjusted to a comfortable position while the "ENGINE START STOP" switch is in ACCESSORY or IGNITION ON mode, or when the driver's seat belt is fastened.

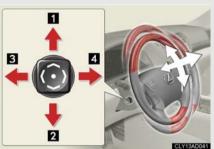

- 1 Up
- 2 Down
- Away from the driver
- 4 Toward the driver

#### ■ Automatic adjustment of the steering position

A desired steering position can be entered to memory and recalled automatically by the driving position memory.  $(\rightarrow P. 87)$ 

#### ■ Power easy access system

The steering wheel and driver's seat move in accordance with "ENGINE START STOP" switch mode and the driver's seat belt condition.  $(\rightarrow P. 90)$ 

## **A** CAUTION

## ■ Caution while driving

Do not adjust the steering wheel while driving.

Doing so may cause the driver to mishandle the vehicle and cause an accident, resulting in death or serious injury.

## 1-3. Adjustable components (seats, mirrors, steering wheel)

## Anti-glare inside rear view mirror

In automatic mode, sensors are used to detect the headlights of vehicles behind and automatically reduce the reflected light.



Turns automatic mode on/ off

The indicator comes on when automatic mode is turned on.

The mirror will revert to automatic mode each time the "ENGINE START STOP" switch is turned to IGNITION ON mode.

## Adjusting the height of rear view mirror



Adjust the height of the rear view mirror by moving it up and down.

## ■ To prevent sensor error



To ensure that the sensors operate properly, do not touch or cover them.



## ■ Caution while driving

Do not adjust the position of the mirror while driving.

Doing so may lead to mishandling of the vehicle and cause an accident, resulting in death or serious injury.

## 1-3. Adjustable components (seats, mirrors, steering wheel)

## Outside rear view mirrors

Mirror angle can be adjusted using the switch when the "ENGINE START STOP" switch is in ACCESSORY or IGNITION ON mode.



- Selects a mirror to adjust ("L": left or "R": right)
- Adjusts the mirror up, down, in, or out using the switch

## Folding and extending the mirrors



- Folds the mirrors
- Extends the mirrors

Putting the outside rear view mirror folding switch in the neutral position sets the mirrors in automatic mode. Automatic mode allows the folding or extending of the mirrors to be linked to locking/unlocking of the doors.

■ When the mirrors are fogged up

Turn on the mirror defoggers to defog the mirrors.  $(\rightarrow P.385)$ 

■ Automatic adjustment of the mirror angle

A desired mirror face angle can be entered to memory and recalled automatically by the driving position memory.  $(\rightarrow P. 87)$ 

#### ■ Linked mirror function when reversing

The outside rear view mirrors will automatically angle downwards when the vehicle is reversing in order to give a better view of the ground. However, this function will not operate when the mirror select switch is in the neutral position (between "L" and "R").

#### ■ Auto anti-glare function

When the anti-glare inside rear view mirror is set to automatic mode, the outside rear view mirrors will activate in conjunction with the anti-glare inside rear view mirror to reduce reflected light.  $(\rightarrow P. 106)$ 

## **A** CAUTION

#### ■ When driving the vehicle

Observe the following precautions while driving.

Failing to do so may result in loss of control of the vehicle and cause an accident, resulting in death or serious injury.

- Do not adjust the mirrors while driving.
- Do not drive with the mirrors folded.
- Both the driver and passenger side mirrors must be extended and properly adjusted before driving.

## ■ When a mirror is moving

To avoid personal injury and mirror malfunction, be careful not to get your hand caught by the moving mirror.

## ■ When the mirror defoggers are operating

Do not touch the rear view mirror surfaces, as they can become very hot and burn you.